

aspex




steel door installation guide


hidden door system




single door components

multiple door components

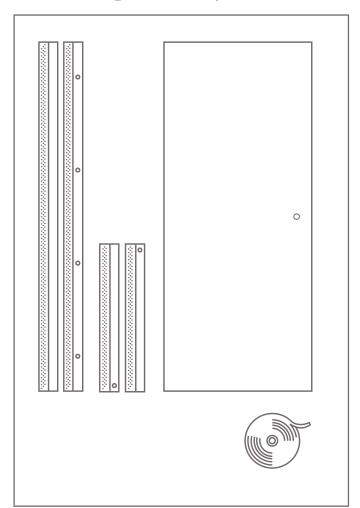

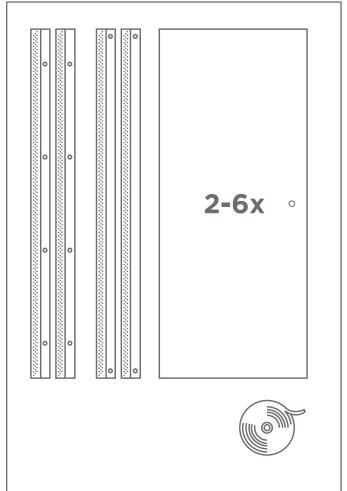


tools required

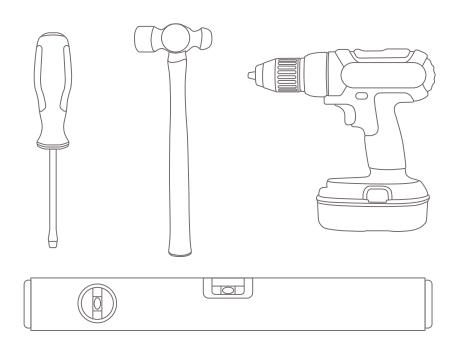







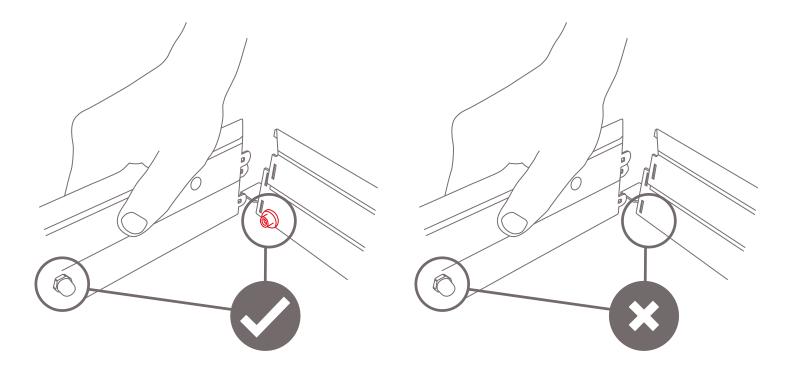


2

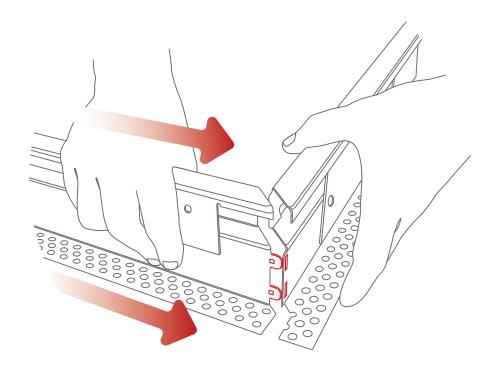




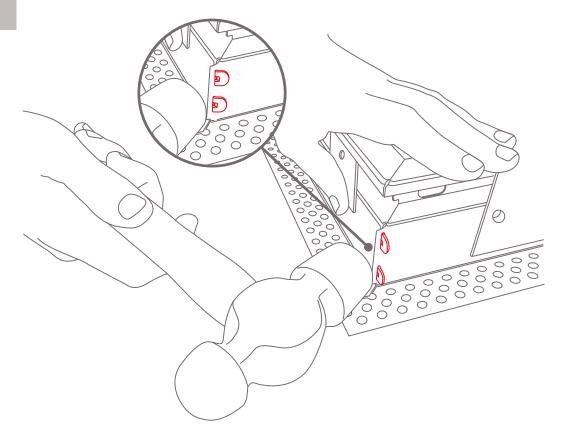


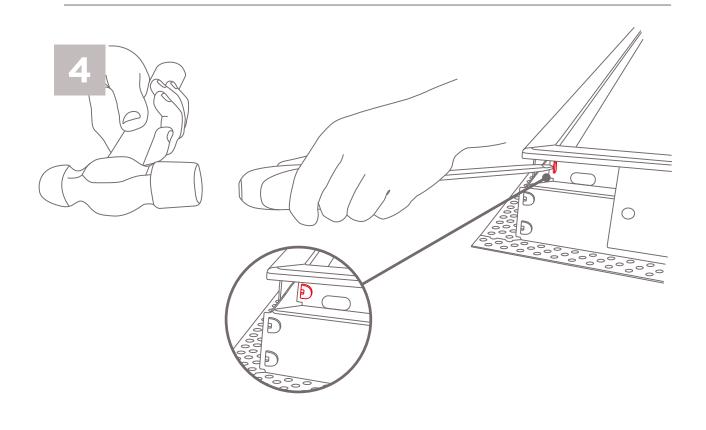






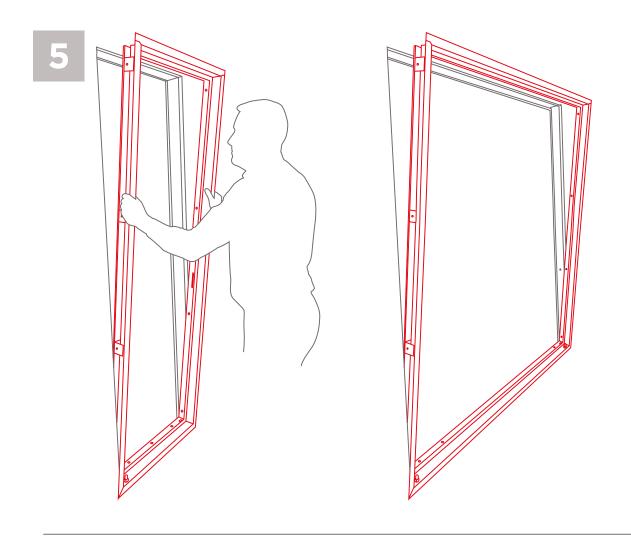

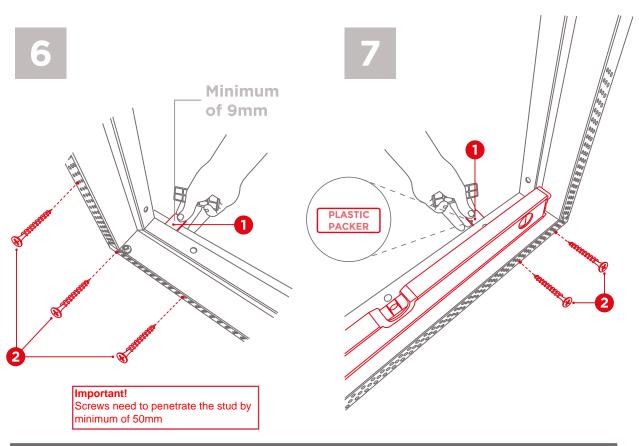







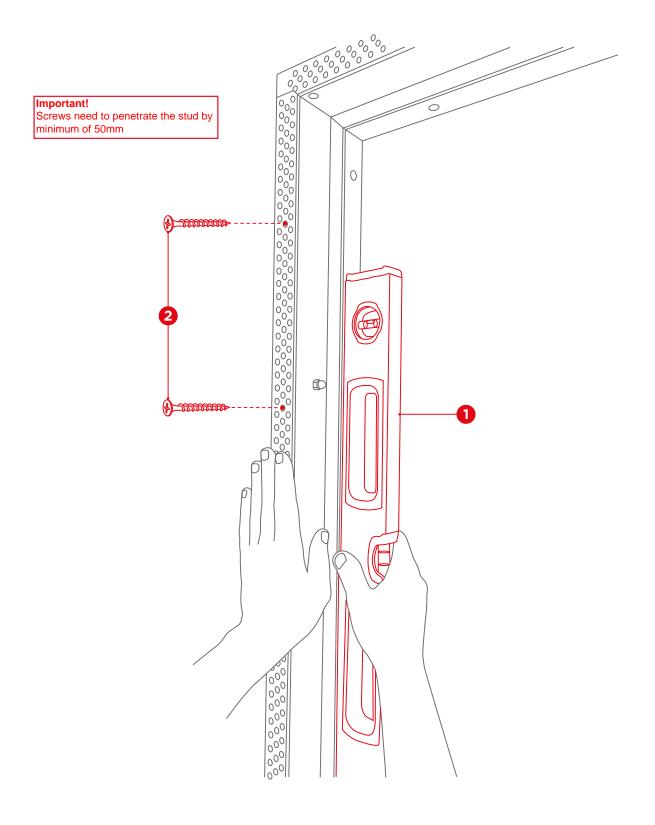







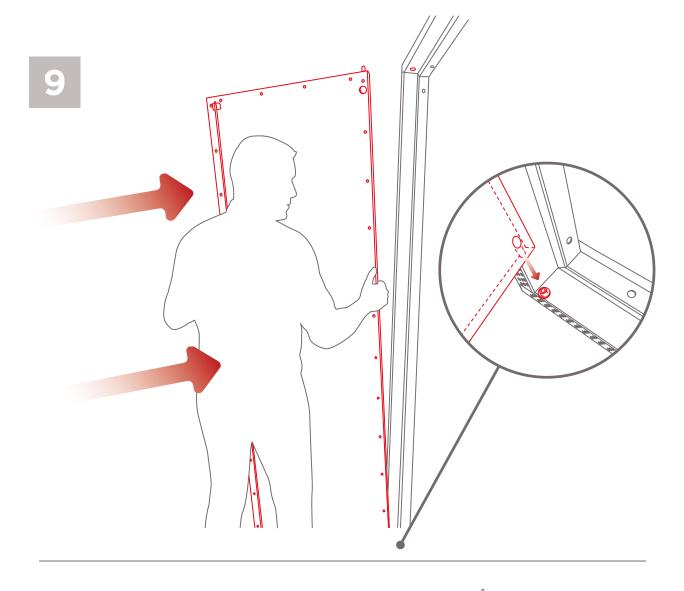

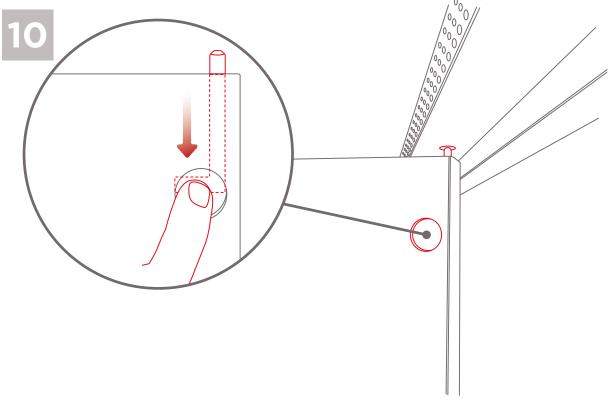


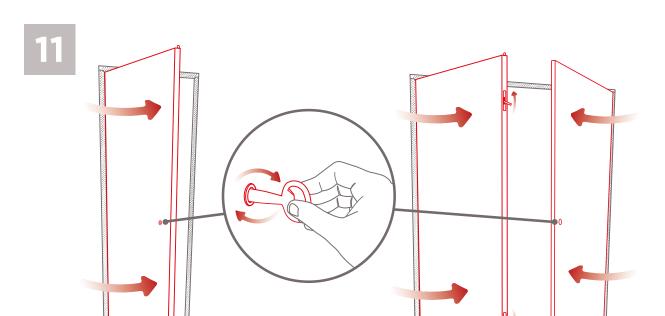

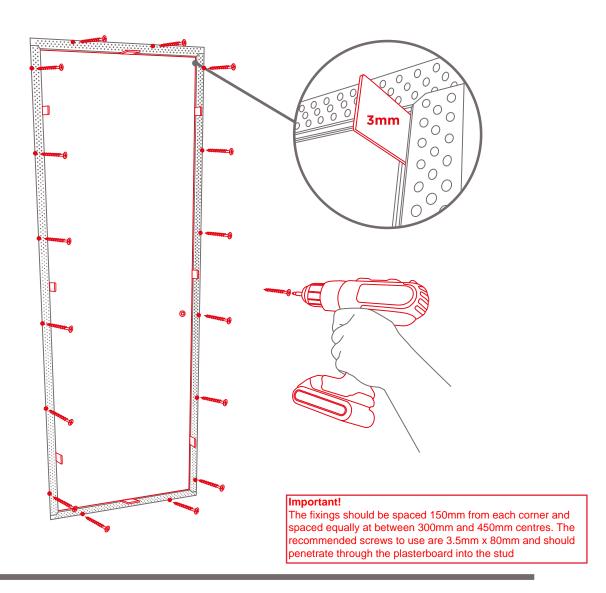





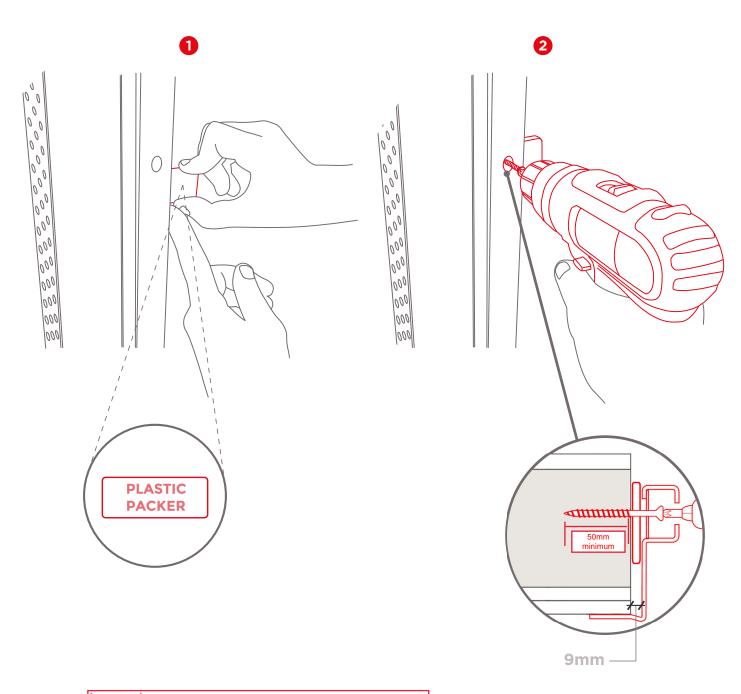


Important!


Ensure that fixings are utilised in all of the frame holes.
Steel screws must be used and they should locate at least 50mm into the adjoining wall construction






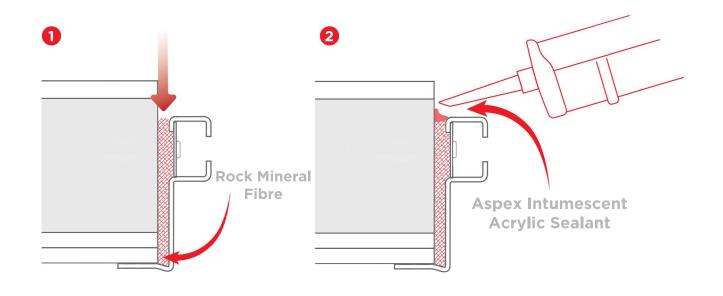



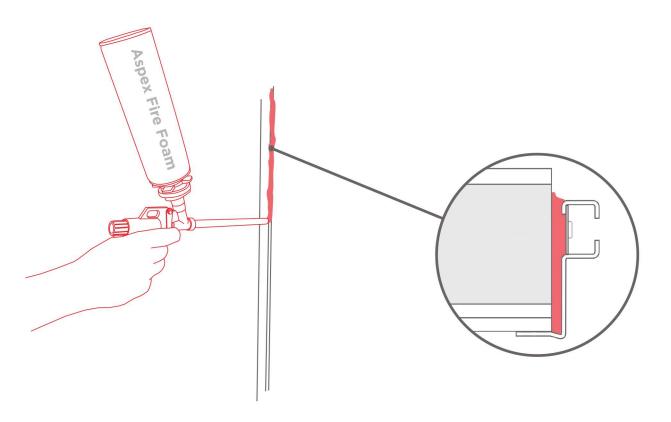


Click here for our fire stopping datasheets

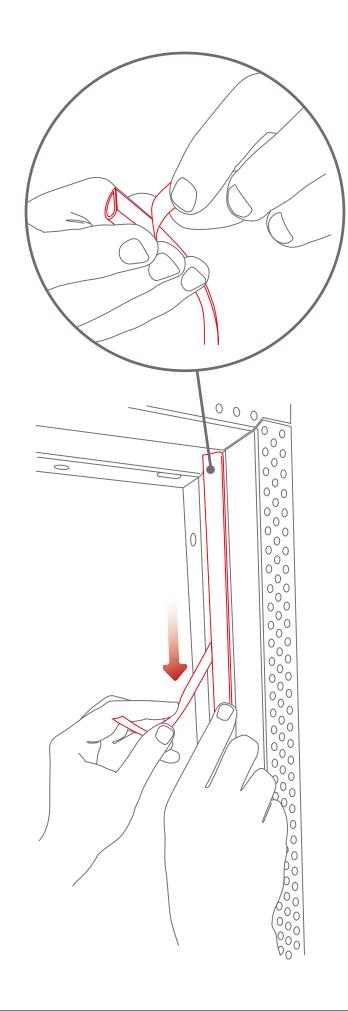









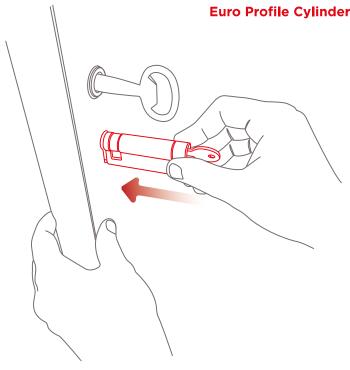

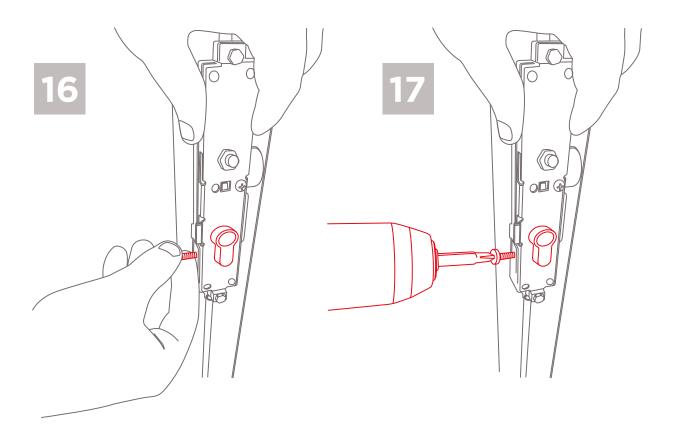


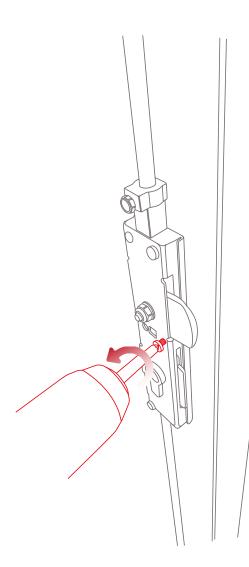

Important!

To activate the cylinder, the small screw must be removed. Once the screw is removed the cylinder should not be exchanged. If the cylinder requires change, seek advice via our technical department


19

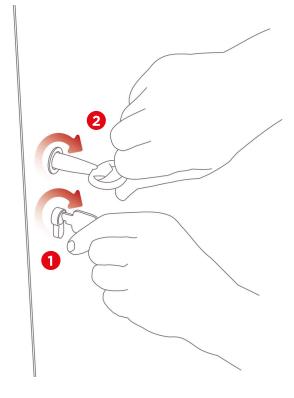



20

Novista Riser door restrictors are also available to prevent the door from opening more than 90°

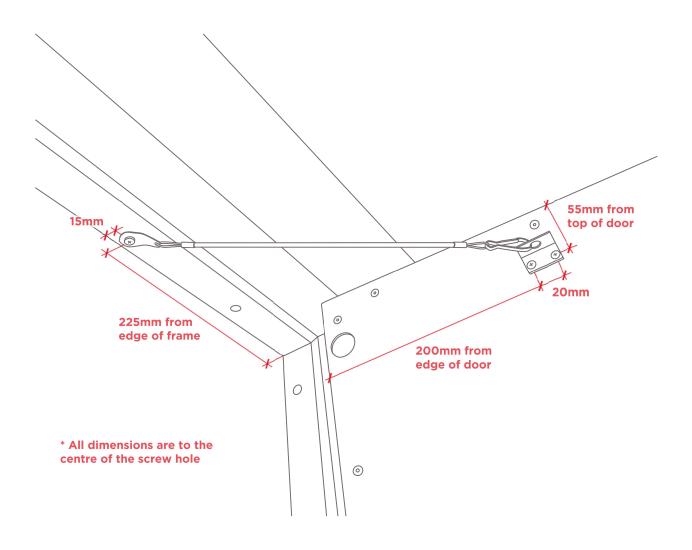









www.aspex-uk.co.uk

Aspex UK

Winchester Avenue Blaby Leicester LE8 4GZ

T: 0116 278 3506

F: 0116 278 4069

E: sales@aspex-uk.co.uk Company Registration: 05787953

Aspex Scotland

39 Deerdykes View, Westfield, Cumbernauld, G68 9HN

T: 01236 720061 **F:** 01236 780170

E: scotland@aspex-uk.co.uk Company Registration: 05787953